

TakeYourSeat Manual; Stool | Chair | Armchair | 2 Seater Sofa | 3 Seater Sofa


Do you use the product for Home staging – sales styling and would you like to save time?

Then you can also decide to only equip the <u>seats</u> with the internal structure.

PARTS TakeYourSeat:




S1 and S2: Interior Seat



B1 and B2: Interior Backrest



A1 and A2: Interior Armrest

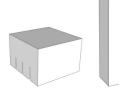

Box Seat Box Backrest



Box Armrest




Connector


INTERIOR SEAT:


- 4 x S1
- 4 x S2

Take four pieces S2. Slide the four parts S1 into S2.

!* Use the correct cutouts

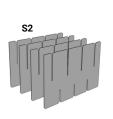

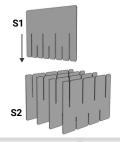

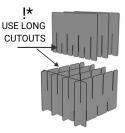




INTERIOR BACKREST:

- 3 x B1
- 3 x B2

Take three parts B1. Slide three pieces B2 into B1.



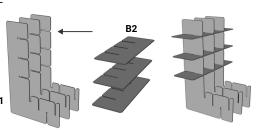


INTERIOR ARMREST:

- 3 x A1
- 2 x A2

Take three parts A1. Slide two parts A2 into A1.



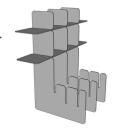



BOX SEAT:

- 1 x box seat
- 1 x anti-slip mat

To close the box, use the double-sided tape that is already attached.


(If the box needs to be refolded, use clear tape.)

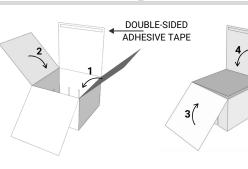

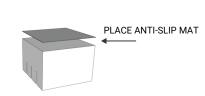


BOX BACKREST:

- 1 x box backrest
- transparent adhesive tape

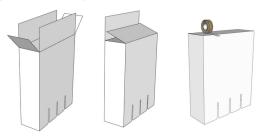


BOX ARMREST:

- 1 x box armrest
- transparent adhesive tape

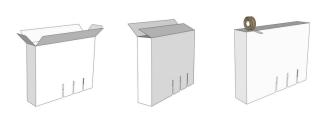

ASSEMBLE STOOL:

- Interior seat
- Cardboard seat with Anti-slip mat
- Cover

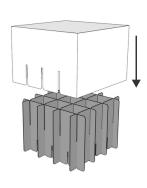





PULL THE COVER DOWN EVENLY.


TIP: COVER CAN BE IRONED ON THE MODULE!


ASSEMBLE CHAIR WITHOUT

- ARMRESTS:
- 1 x Interior seat1 x Interior backrest
- 1 x Box seat with Anti-slip mat
- 1 x Box backrest
- Cover

STEP 1 (INTERIOR)

!* Use the correct cutouts

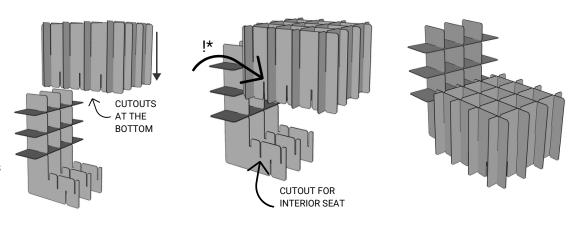

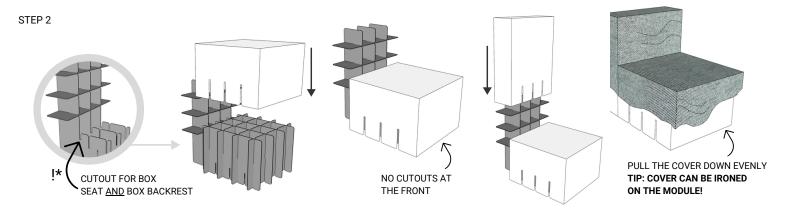



ASSEMBLE CHAIR:

- 1 x Interior seat
- 1 x Interior backrest
- 2 x Interior armrest
- 1 x Box seat with Anti-slip mat
- 1 x Box backrest
- 2 x Box armrest
- Cover

STEP 1 (INTERIOR)

!* Use the correct cutouts

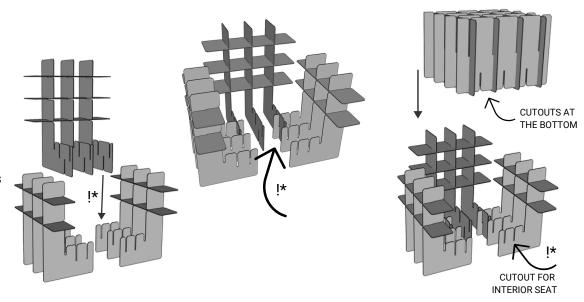

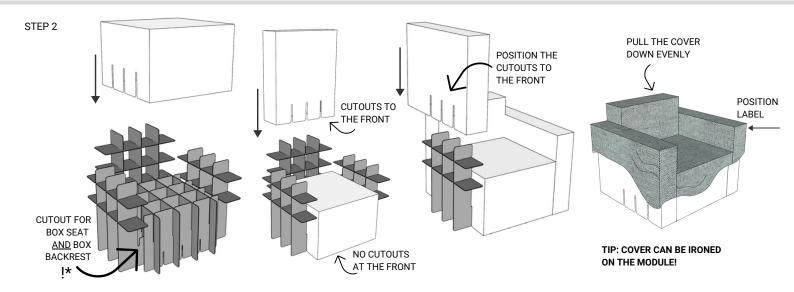

ASSEMBLE 2-SEATER SOFA: • 2 x Interior seat • 2 x Interior backrest • 2 x Interior armrest • 2 x Box seat with _ CUTOUTS AT Anti-slip mat THE BOTTOM 2 x Box backrest • 2 x Box armrest • 3 x Connectors Cover !* Use the correct cutouts <u>LEFT ARMREST + BACKREST</u> CUTOUT FOR INTERIOR SEAT CUTOUT FOR BACKREST + ARMREST RIGHT INTERIOR SEAT **INSERT 3 CONNECTORS** CONNECTOR POSITION THE CUTOUTS PULL THE COVER DOWN EVENLY TO THE FRONT

