

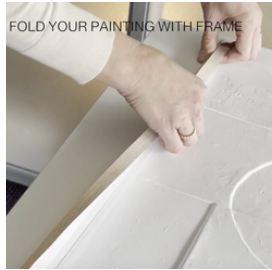


HOW TO ASSEMBLE:

Printed Wall Art reliëf Painting - Wall Panel 3D-effect - textured Wall Panel by Cubiqz

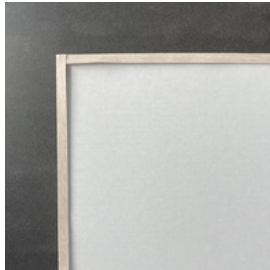


1. Fold over the edges of the panel, on the double die-cut line already applied. Make a sharp fold so that the frame is nice and square
2. Remove the protective film on the cardboard plate. Place on the thickened rim and stick it. Press firmly along the tape edges

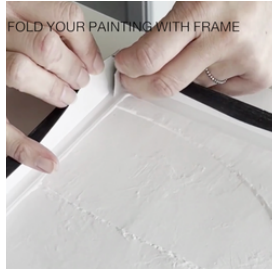

1. Adhere the corners of the painting using the double-sided tape already applied. Press firmly!
2. Your Wall Art reliëf Painting is ready



1. The panel is now formed and can be attached to the wall with the (supplied) self-adhesive nail
2. Stick the TESA adhesive tape on the wall
3. Press the TESA nail on the adhesive tape
4. Attach the panel by push/click the nail through the cardboard

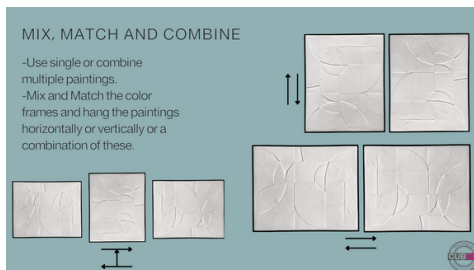

Mix, match and combine

- Use single or combine multiple paintings.
- Mix and Match the color frames and hang the paintings horizontally or vertically or a combination of these.



DIY, create your own look

Would you like to paint the framed reliëf art panel in your favorite colors? Customize it by painting it in your own desired colors! Create your own look to match any color home decor.

