

### The following is added to the package:

- Instructions for building the kitchen
- Velcro rounds (hard and soft side)
- Concrete nail hooks (if you ordered an extractor)
- Do not sit signs. We advise to place these on the products!

### For the best result:

- The kitchen is built easiest when the user manual is followed step by step!
- Carefully fold the boxes and stick them straight. Make sure the box is in a nice 4-side / rectangle.
- Cross-braces for the boxes; Attention: the boxes are 58,5 cm wide and 60 cm deep. The cross-braces can only be applied in one way. If it doesn't fit; rotate 90 degrees!
- Make sure the boxes are stable on the ground.
- Cutouts for pipelines / sockets etc. can be cut out of the white boxes.
- The hanging parts can be attached with concrete nail hooks.
- For a corner kitchen: start building up from the corner!!

### We advise you to have the following tools when installing the kitchen:



- Cutting knife
- Stairs and hammer (when installing an extractor)
- Transparent tape

### The velcro rounds are used as follows:

Mount the fluffy rounds (with loops) with the adhesive side at the designated positions (see below) on the inside of the flap.


Then mount the crude circles (with barbs) **ON** the fluffy side of the circles that are already mounted.

Close the box and press the Velcro firmly.

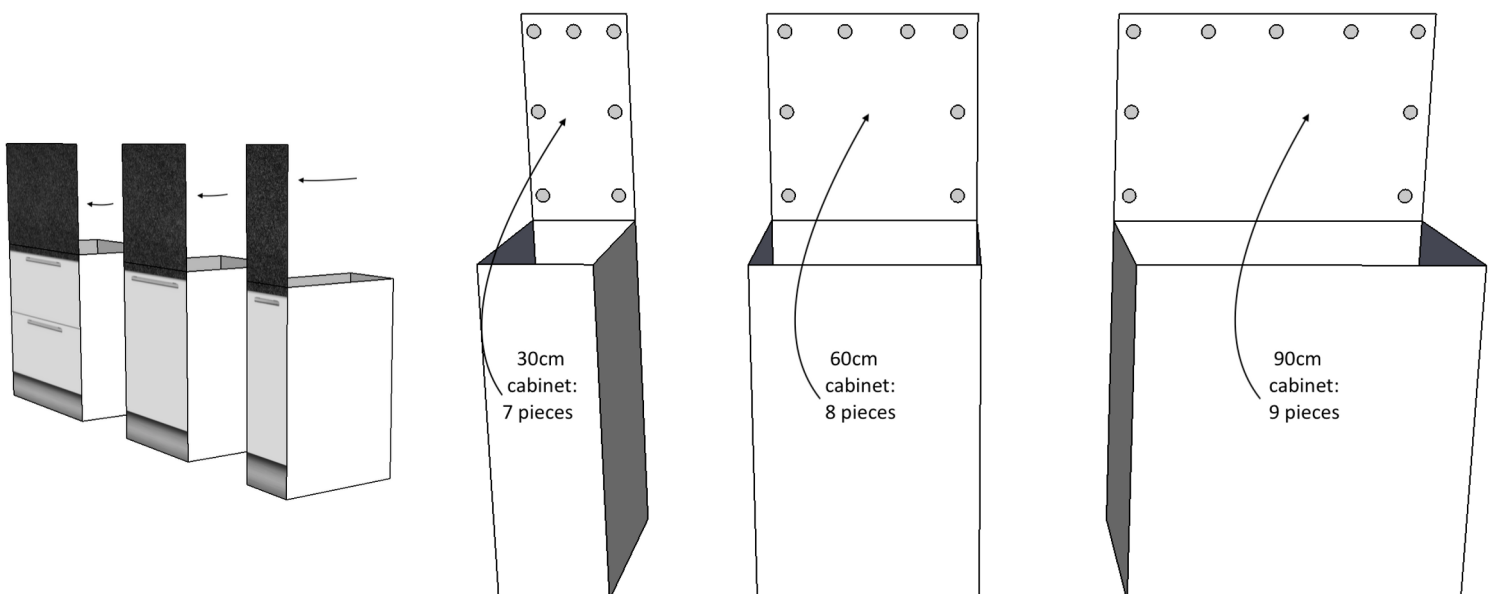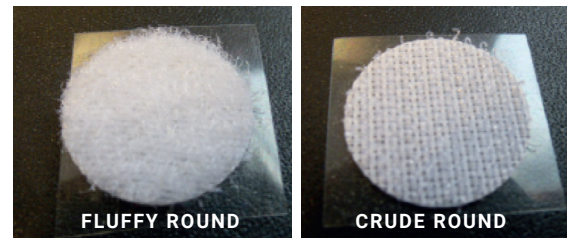

CLEVER CARDBOARD CREATIONS

### LOWER CUPBOARD 30CM WIDE

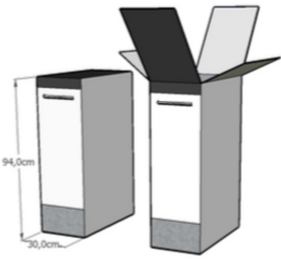

Required boxes:  
1 box with a panel 30x60x94cm  
1 reinforcement cross

#### Description:

- Unfold the box
- Slide the two plates into a cross and push this cross into the opening of the box.
- Mount the Velcro rounds, as described on page 1, on the inside of the flap (7 pieces)
- Close the box

### LOWER CUPBOARD 60CM WIDE



Required boxes:  
1 box with a panel 60x60x94cm  
1 reinforcement cross

#### Description:

- Unfold the box
- Slide the two plates into a cross and push this cross into the opening of the box.
- Mount the Velcro rounds, as described on page 1, on the inside of the flap (8 pieces)
- Close the box

### LOWER CUPBOARD 90CM WIDE




Required boxes:  
1 box with a panel 90x60x94cm  
1 white box 30x60x94  
1 reinforcement cross 60cm  
1 reinforcement cross 30cm

#### Description:

- Unfold the box with the 90cm panel
- Slide the two biggest plates into a cross and push this cross into the opening of the box.
- Remove the cover from the tape on the back of the panel. Place the 30cm wide box (with cross) next to it and press the pane against the box!. For the best result; stick the 30cm and 60cm box to the top and back together using transparent tape
- Mount the Velcro rounds, as described on page 1, on the inside of the flap (9 pieces)
- Close the box

### HIGH CABINET

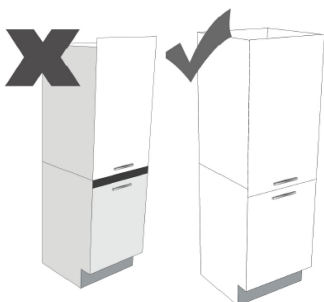


Required boxes:  
1 box with a panel 60x60x94cm  
1 white box 60x60x94  
1 separate pannel (upper part)  
1 reinforcement cross

#### Description:

- Unfold the box with the printed panel
- Slide the two biggest plates into a cross and push this cross into the opening of the box. Close the box.
- Place the second box on top of it (with the open side on top). Stick both boxes together with transparent tape at the back.
- Now stick the separate top panel, with the handle to the bottom, **firmly** over the worktop of the bottom box. In this way the panel will not protrude at the top! (see sketch on the right).
- **Fix the panel by firmly pressing the adhesive edge with your thumbs.**

CLEVER CARDBOARD CREATIONS

### CORNER CABINET 30CM WIDE

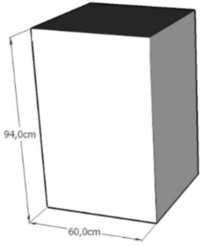


Required boxes:  
 1 box with a panel  
 60x60x94cm  
 1 white box 60x60x94  
 1 separate pannel (worktop)  
 1 reinforcement cross

#### Description:

- Unfold the box
- Slide the two plates into a cross and push this cross into the opening of the box.
- Close the box.
- Mount the Velcro rounds, as described on page 1, on the back of the panel (10 pieces)
- and stick the panel onto the top of the box.


### NEXT STEP

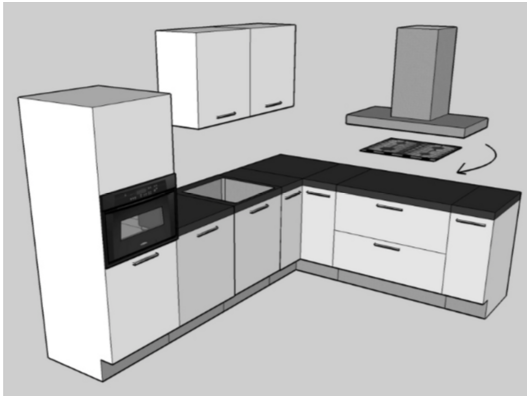


#### Description:

- Set all cabinets in the correct position
- Cut the recesses for the obstacles on the wall from the back of the boxes.
- If you want to fix the separate cabinets invisibly together; fold the top of the panel forward. The white boxes can be stuck together with a piece of transparent tape.
- Now place the printed panels for the appliances

### EXTRACTOR

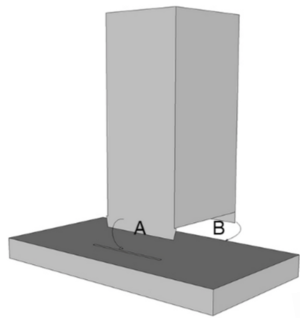

Required boxes:  
 1 box top  
 1 flat box bottom  
 2 concrete hooks

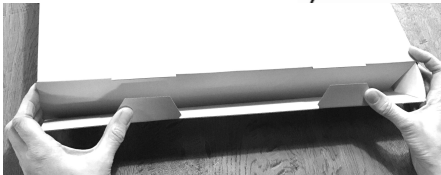

#### Description:

- Unfold the boxes (do not close yet!!)
- Slide flap A into the slot. the thickening must be pressed into the slot for fixation.
- From the inside of the flat box, remove the tape cover from flap A and press the flap on the inside for fixation.
- Fold and close the flat box; Fold the upper flap and side flap inwards, guide the round flap on the inside, then insert the two tabs and press firmly.
- Then stick flap B on the back of the flat box. **Small notches at the back of the flat box indicate the position!**
- Place by means of the supplied concrete hooks and the cut-out at the back.
- For positioning the extractor; see the tip below!

### POSITIONING EXTRACTOR



#### Description:

- Keep 60cm in between the worktop and the extractor. To determine this distance and to ensure that the object hangs straight, you can place a 60cm box on the worktop. You place the
- extractor on top of this.
  - You can now mark on the wall where the concrete hooks should be.
  - Place the concrete hook with the plastic part against the wall and hit (with a hammer) the 3 nails in the wall.
  - The extractor can be suspended by sliding the recess on the back over the 2 hooks